



Ura
































L4-E

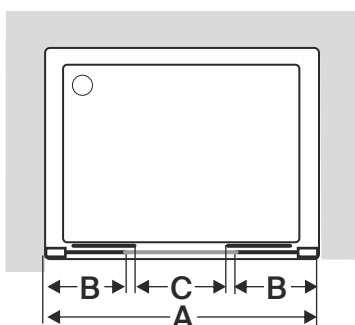



AM20D...

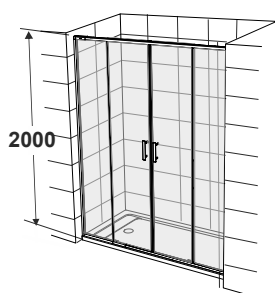

L4-E	A		C		B
	min	m x.	min	m x.	
1600	1520	1620	590	690	370
1700	1621	1720	640	740	395
1800	1721	1820	690	790	420
1900	1821	1920	690	790	470
2000	1921	2020	690	790	520

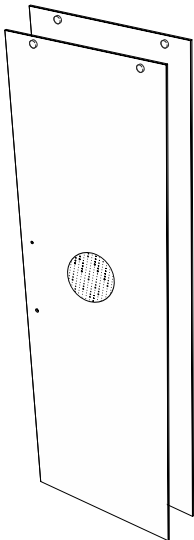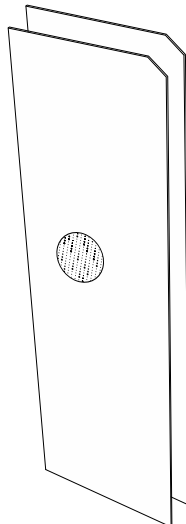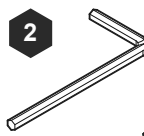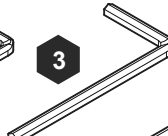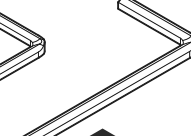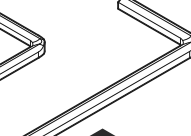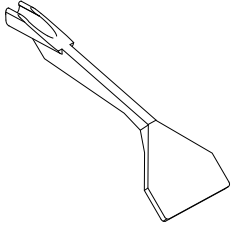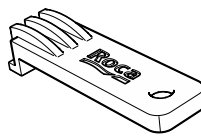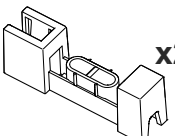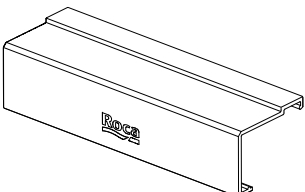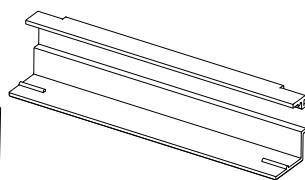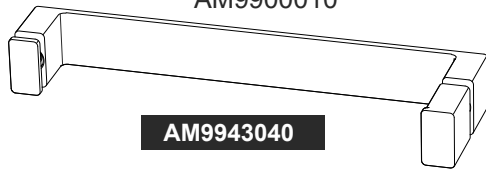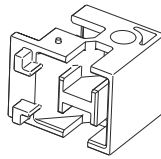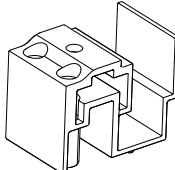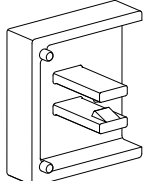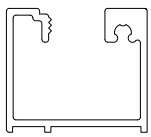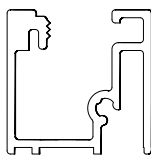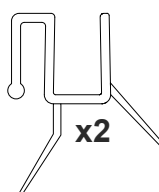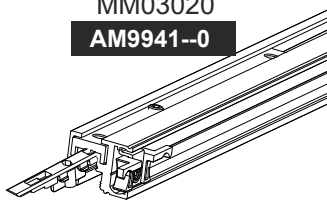
MLC1M/LRC1M  AM99436-M0	MLCAM/MRCAM  AM99435-M0	MTS003200  x6 MTS002900  x6 AM99412000	MTS024200 2  3  4  MTS006100		MTS002000  4		
		MTP067200  AM99412100	MTP088000  AM99412300	MTP084900  x2 AM99430300	MTP07910  x2  x2 MK408440 AM9938860		
MTP08690  AM9941330		MTP08700  MTP086803	x2  AM9900010 AM9943040 x4  MTP085403 AM99430300				
MTZ05530  AM9941380	MTS017400 	MTZ05520  AM9941370	MTS017400 	MK409350  x4 AM9941440	MTP071700  x2 AM99412200	MTP08710  AM9941360	
MM03060  AM9941570	MM01900  AM9939060	MM03050  AM9941580	MU0750010  x4 AM99439500	MU0567010  x2 AM99415400	MU0735010  x4 AM99414806	MU0737010  AM99415200	MU0724010  AM99415300
MU0563010  x2 AM9937440	MTP08430  x2 AM9939390	MK4093303 M99413903  x2 MTP088203 AM99414103 MK409340 AM99414003  x4 MK4093703 AM9941420  MM03020 AM9941--0					

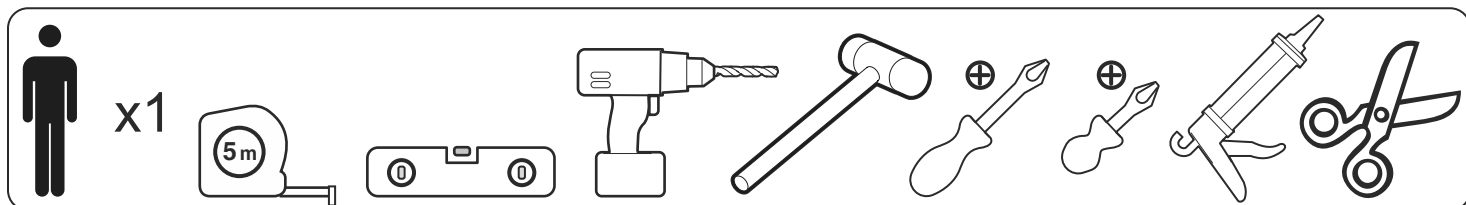

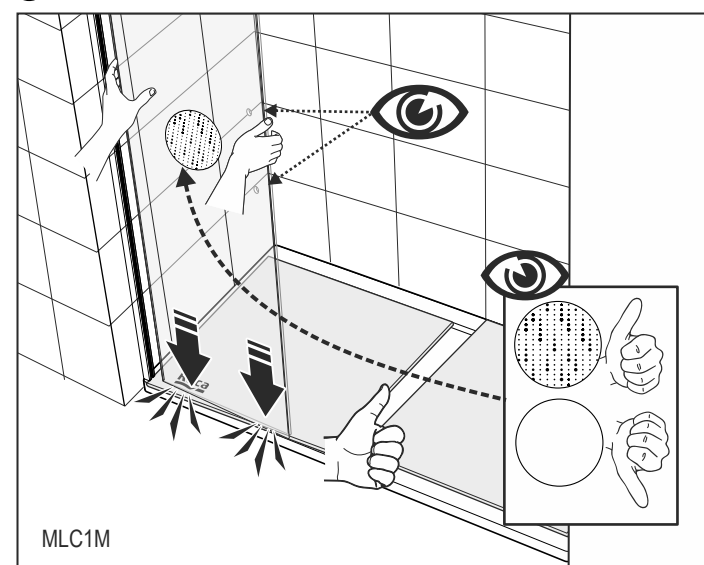





7

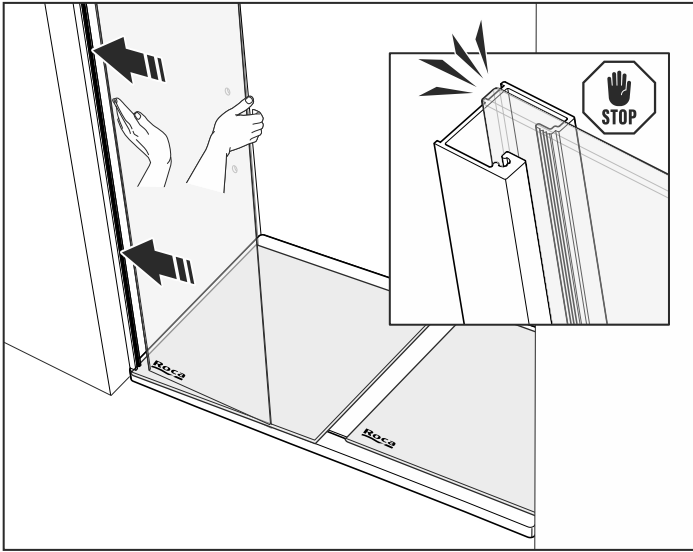


8

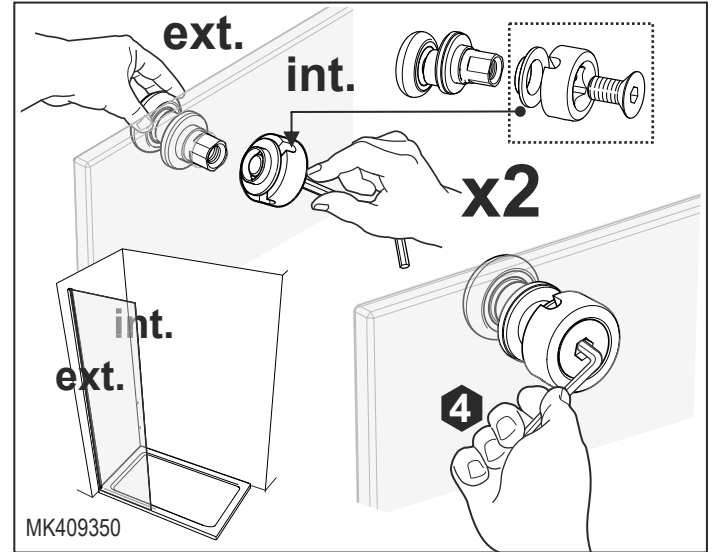


9

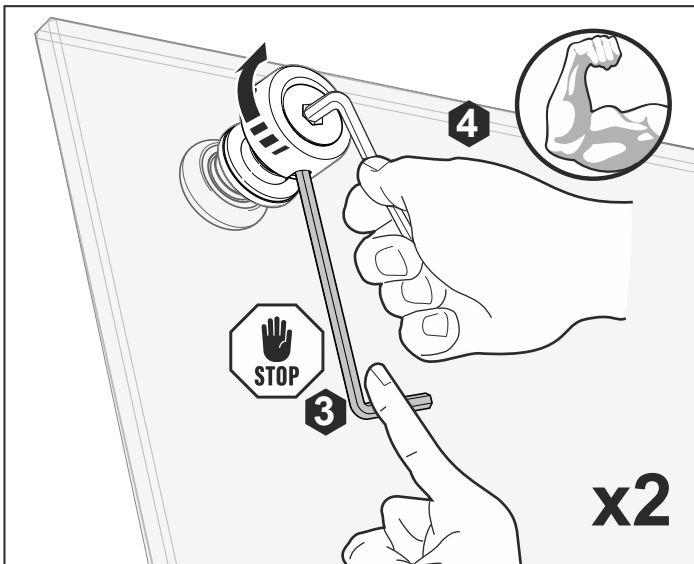


10

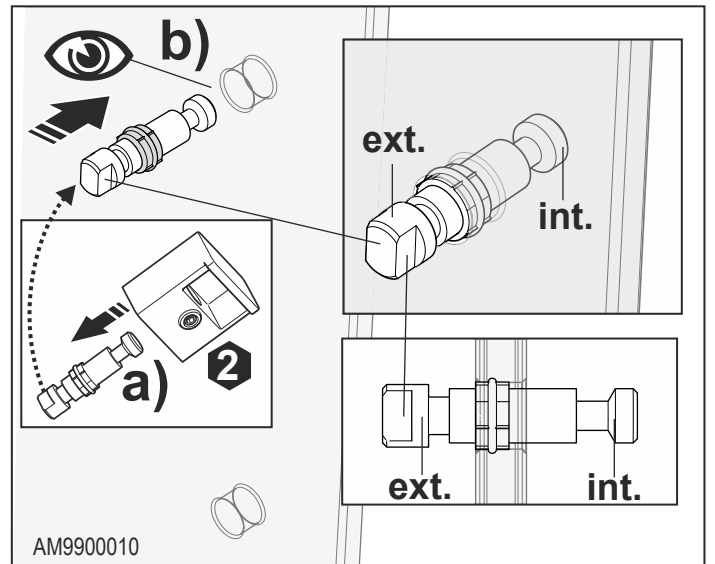

11

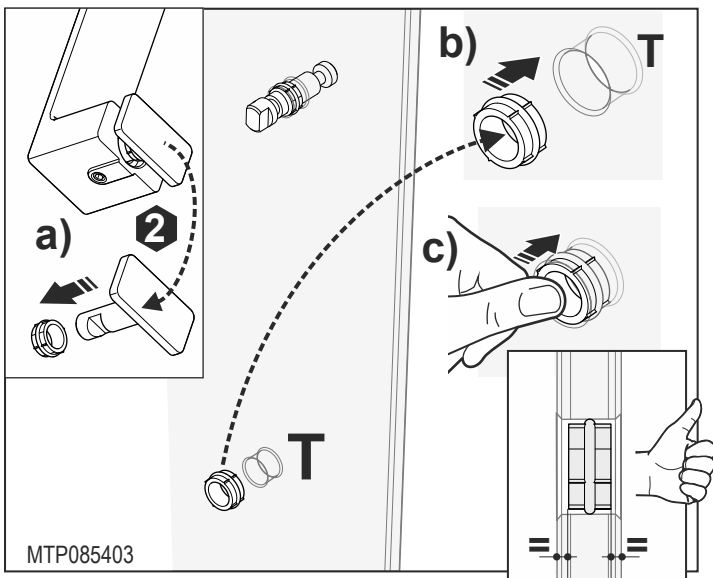


12

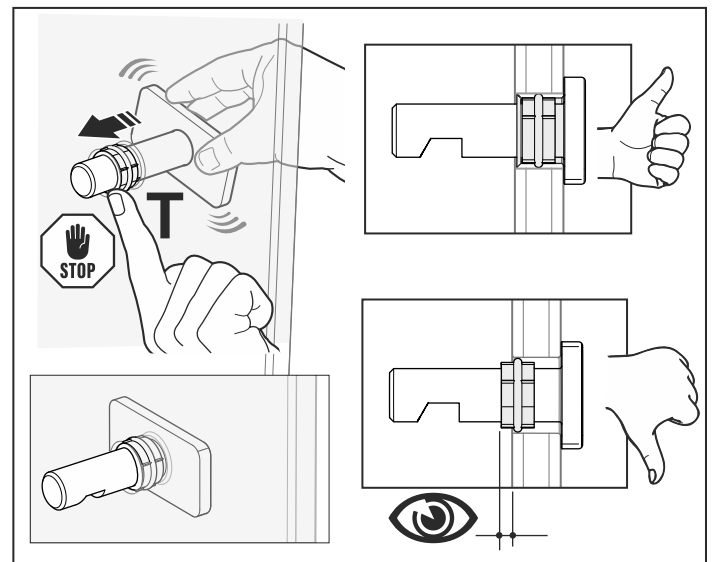





13

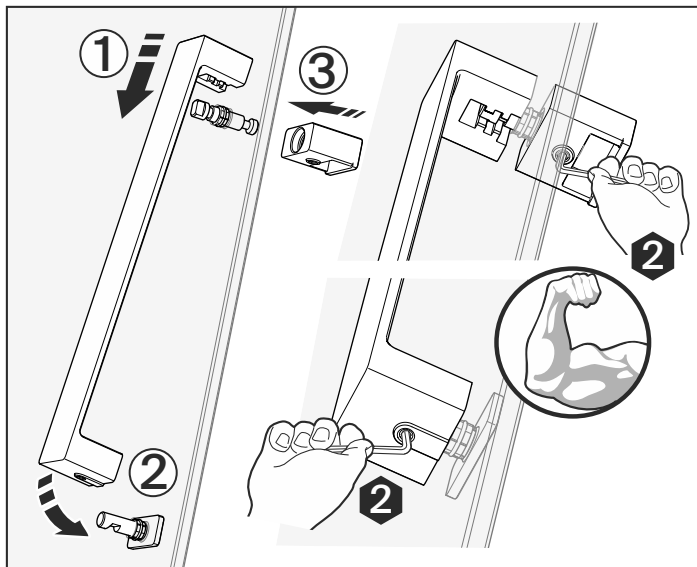


14

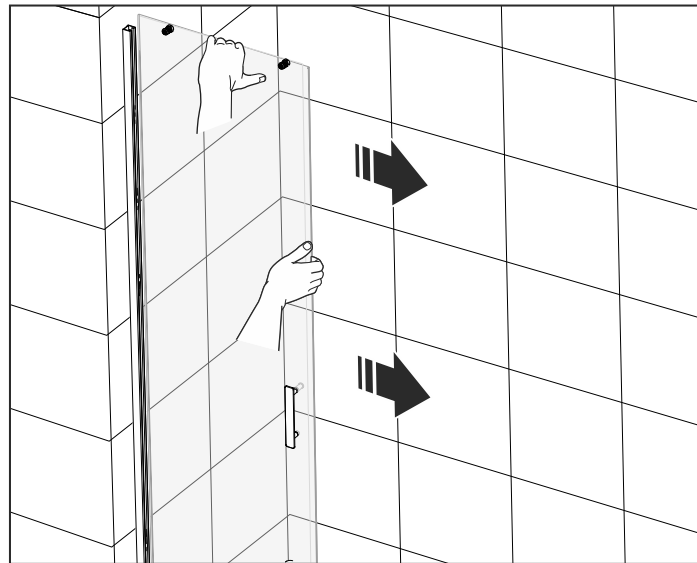


15

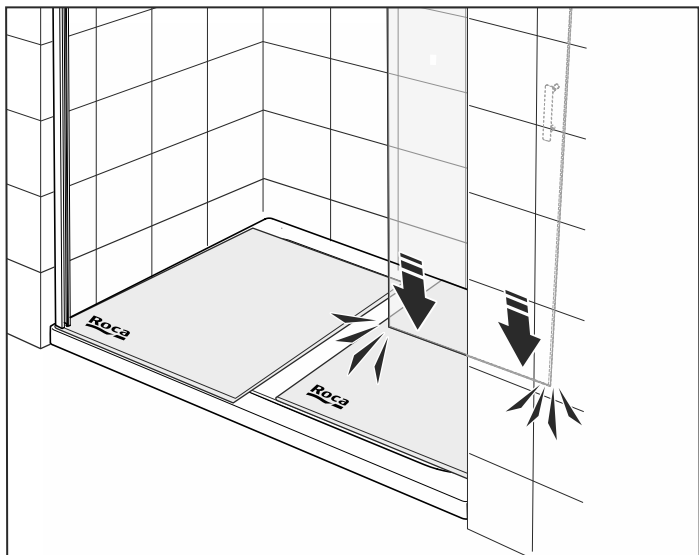


16

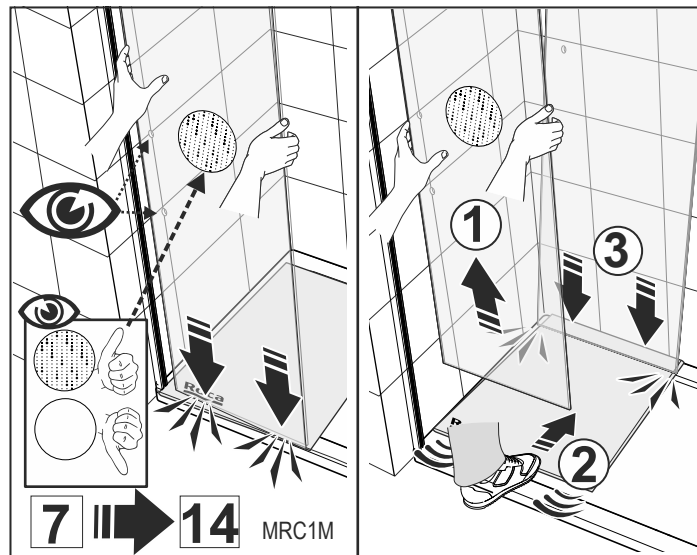

17

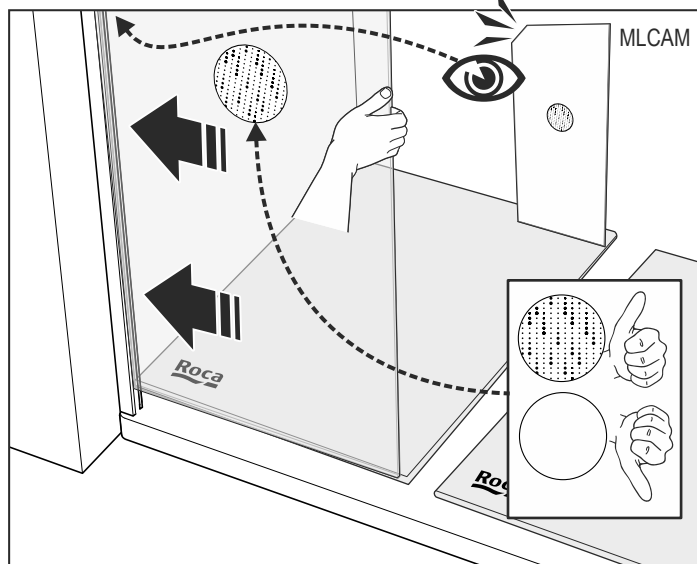


18

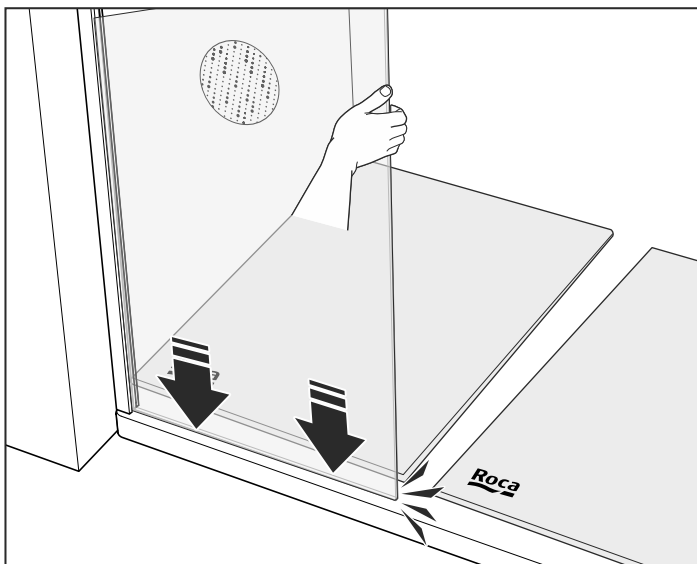





19

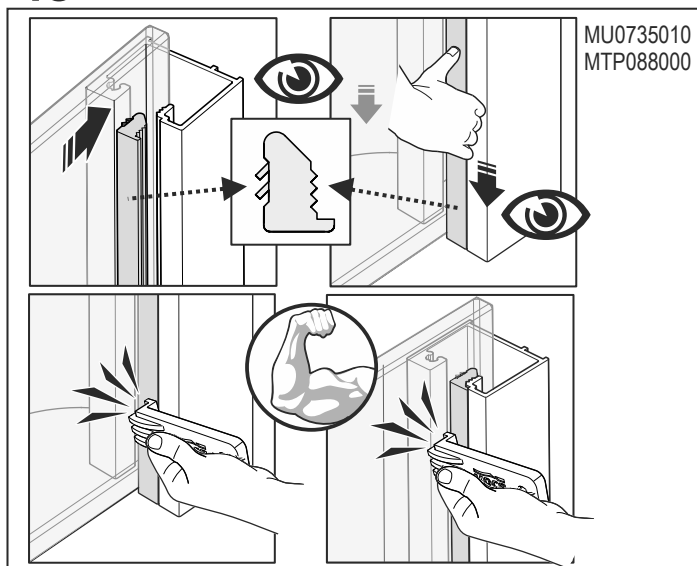


20

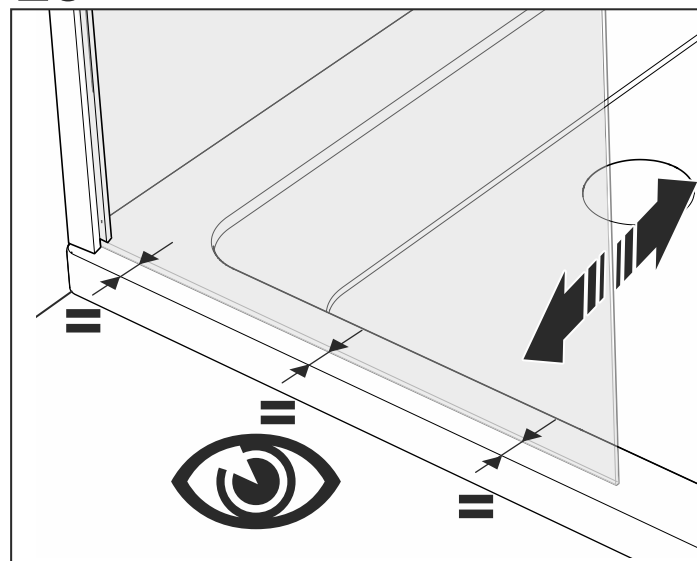


21

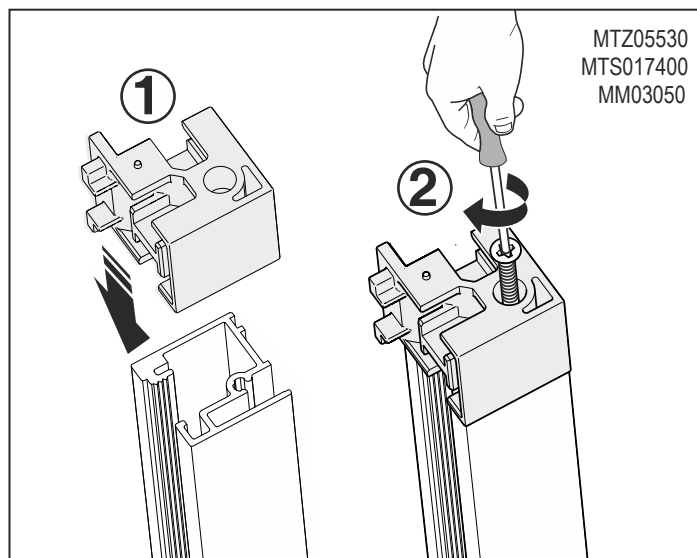


22

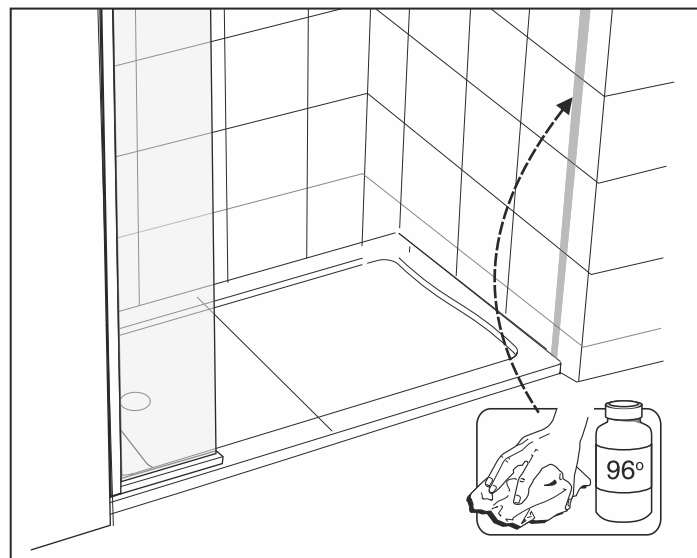

23

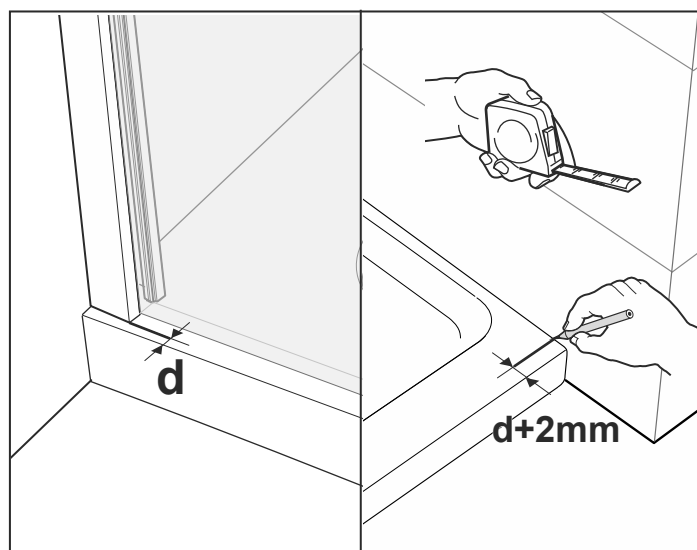


24

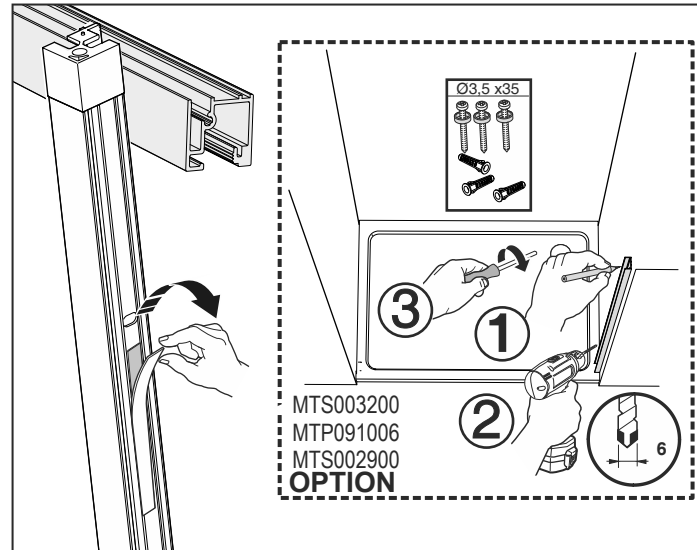





25

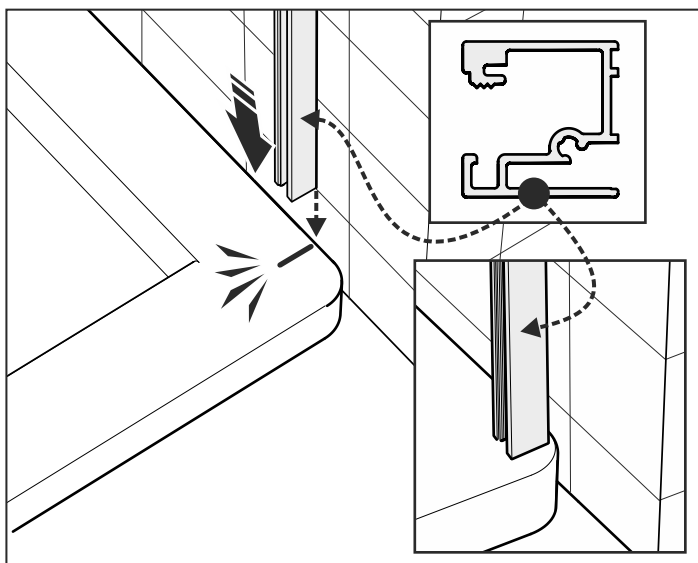


26

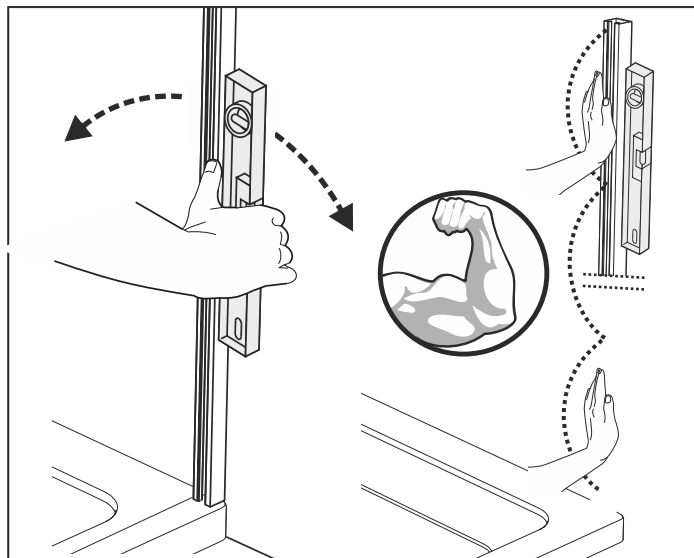


27

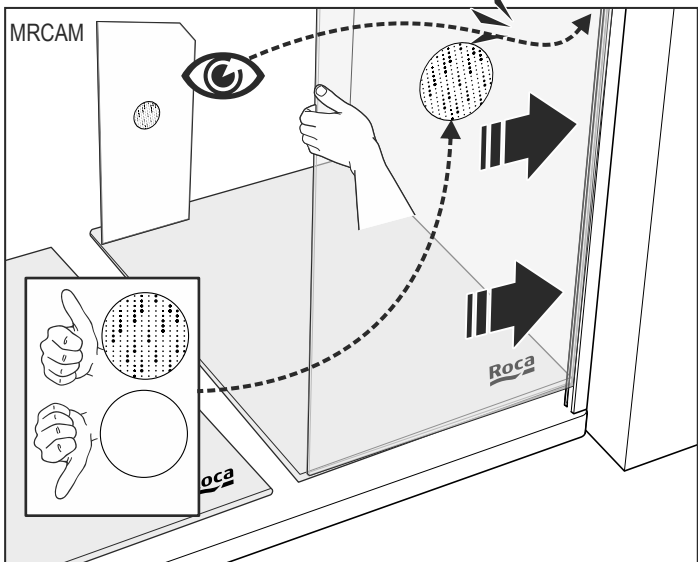


28

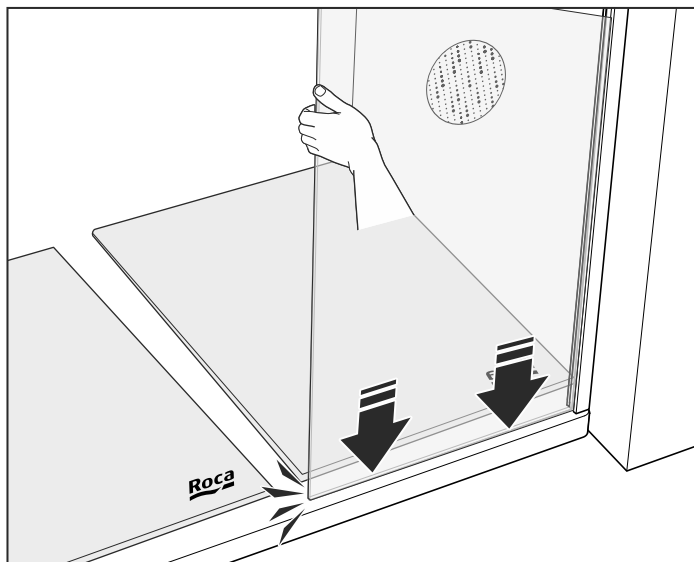

29

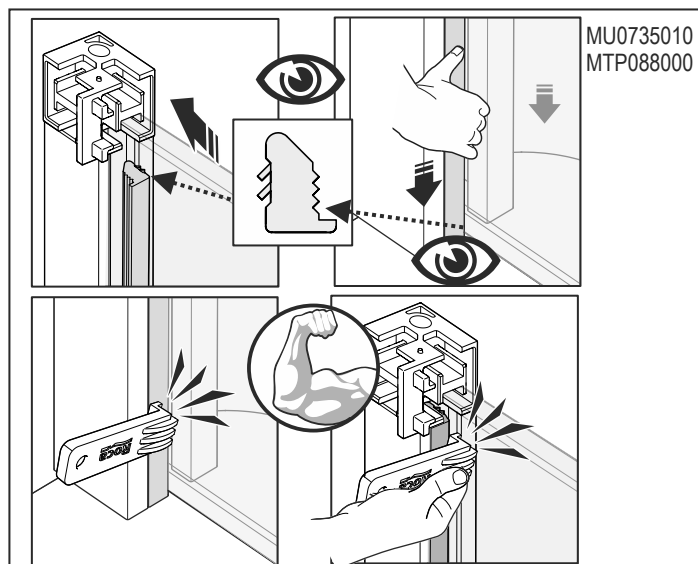


30

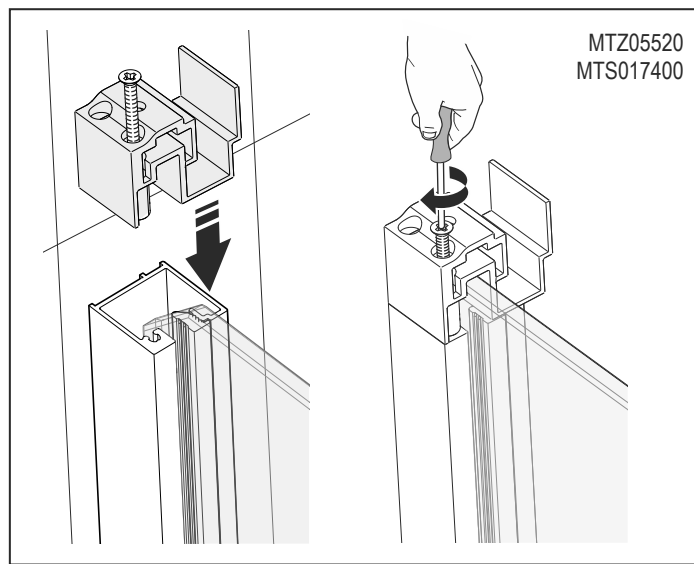





31

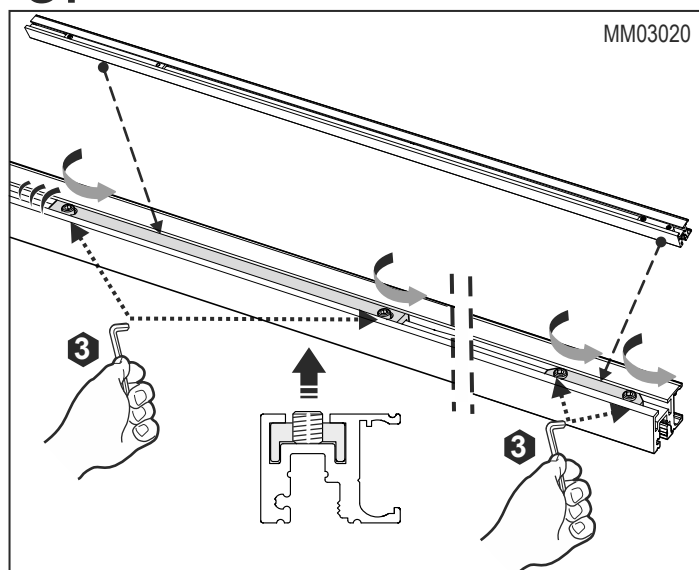


32

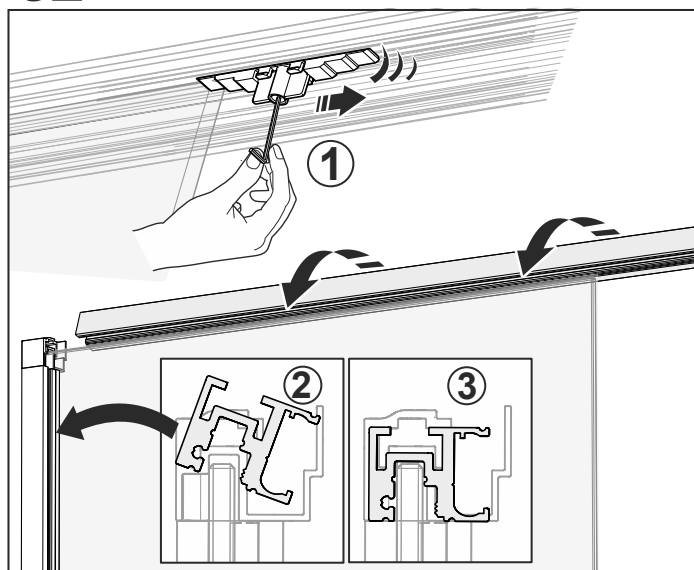


33

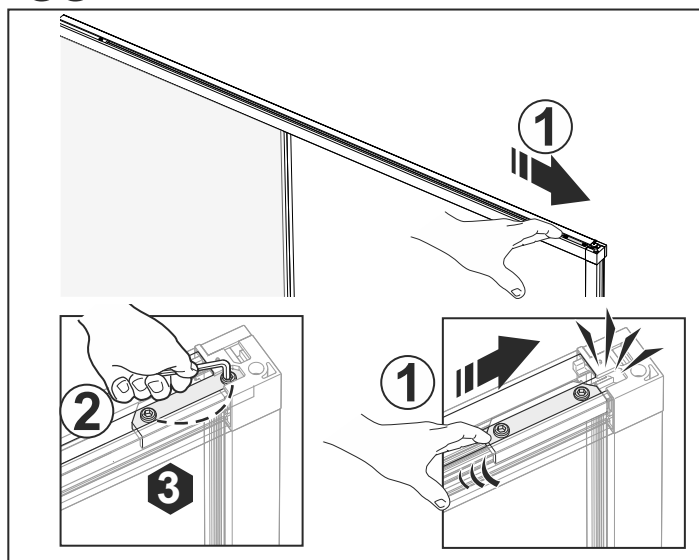


34

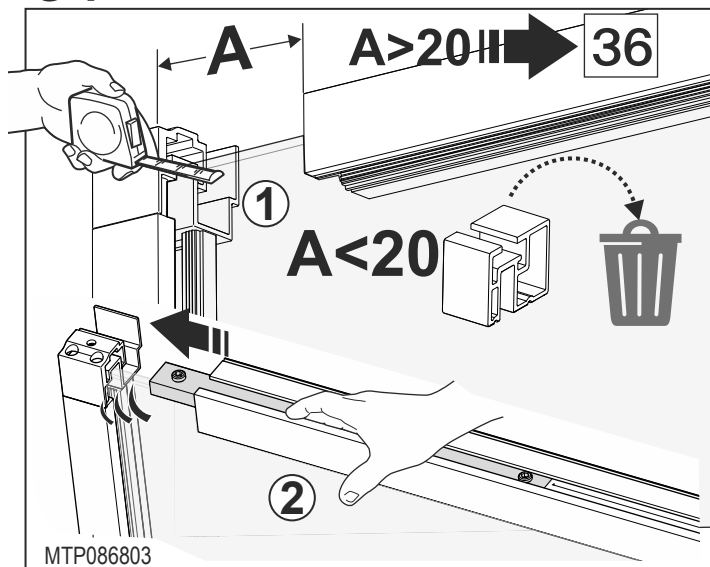

35

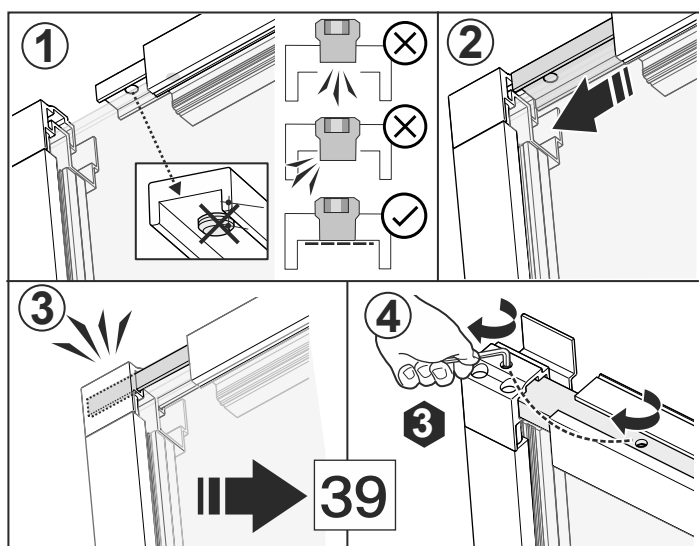


36

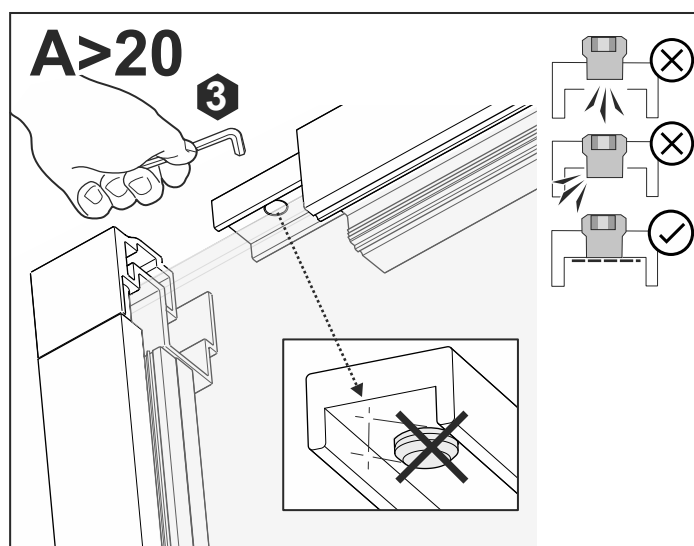





37

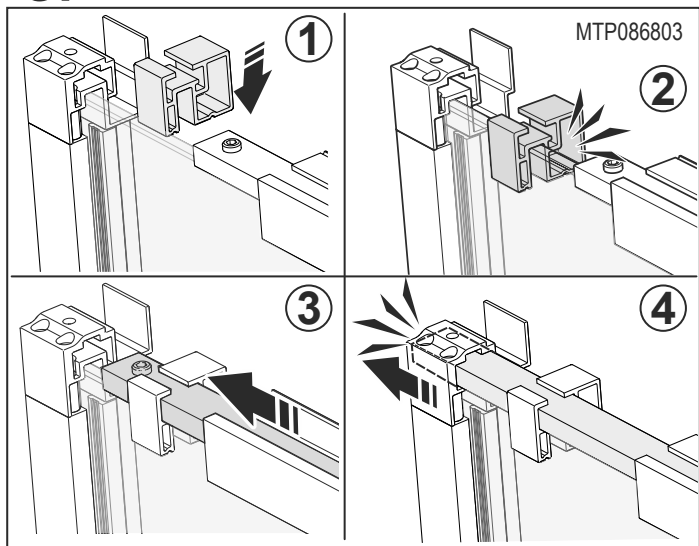


38

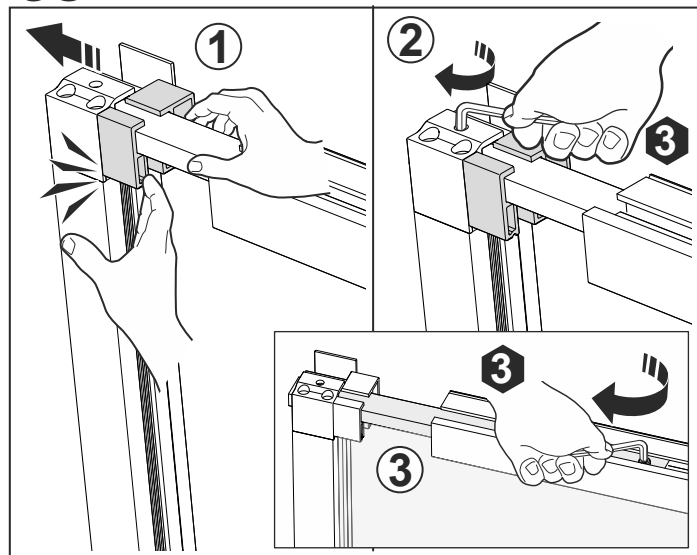


39

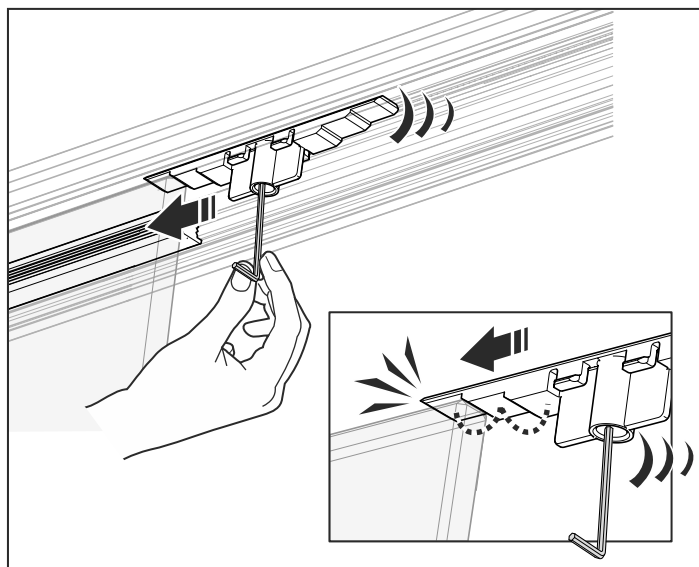


40

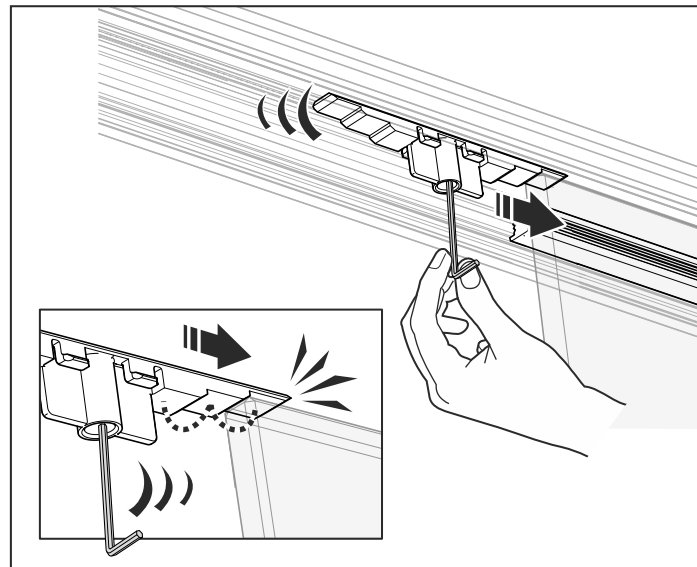

41

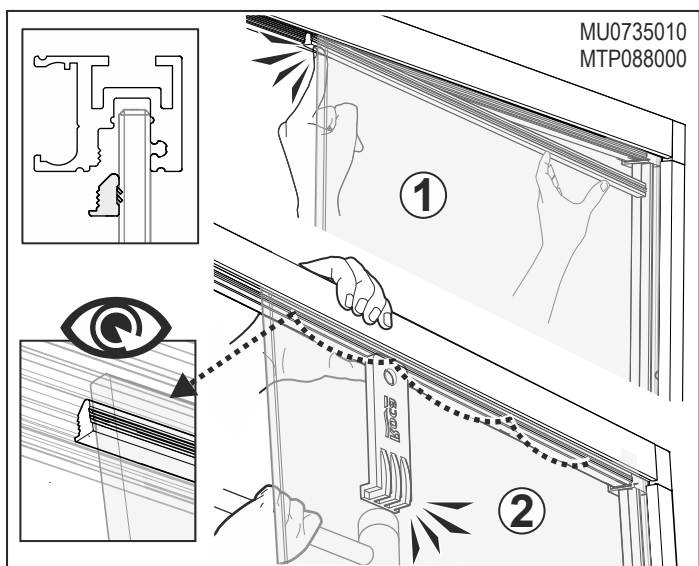


42

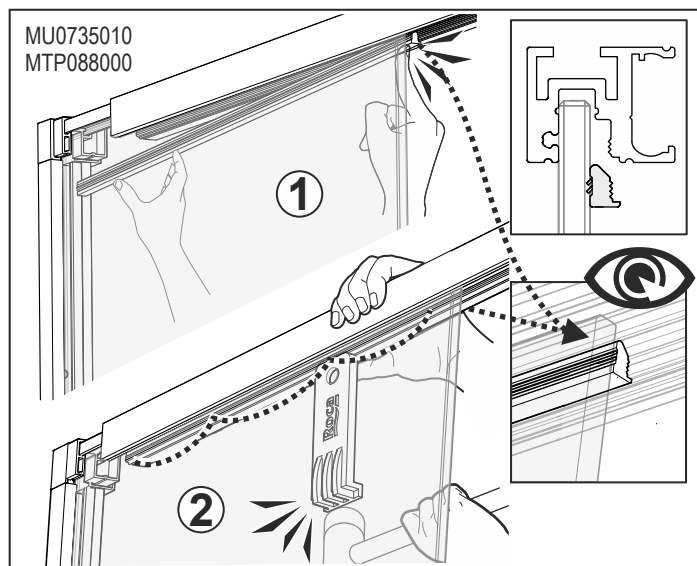





43

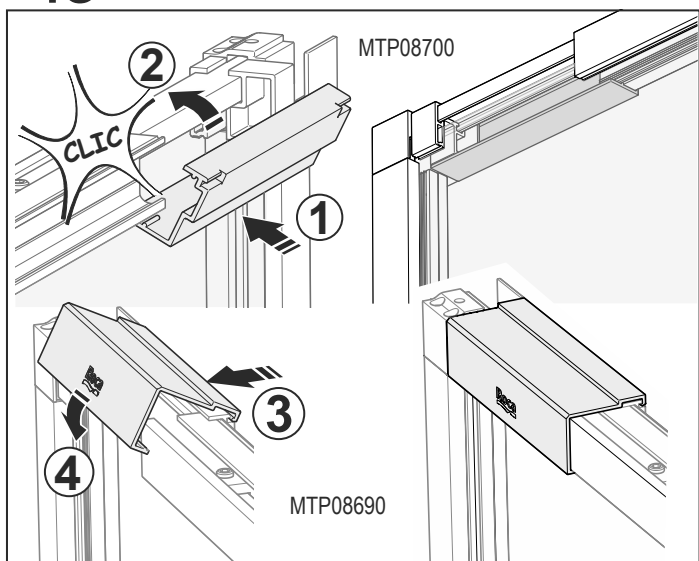


44

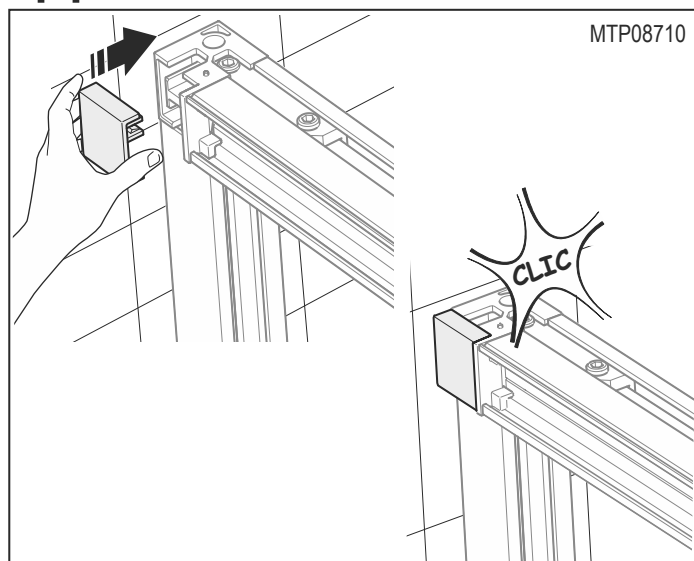


45

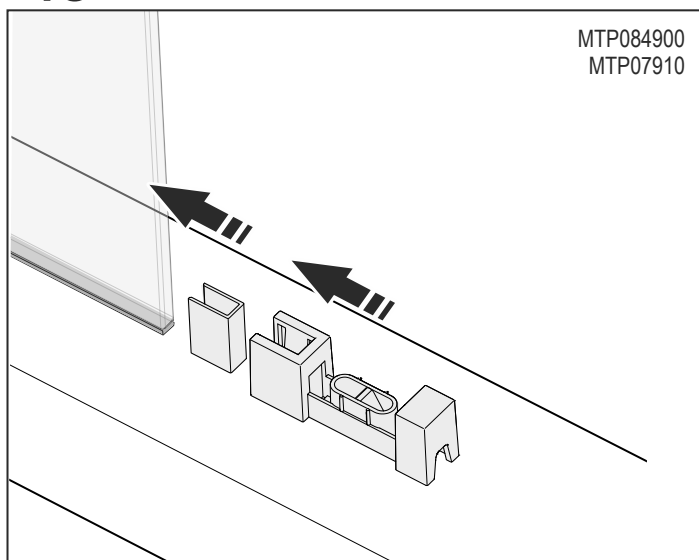


46

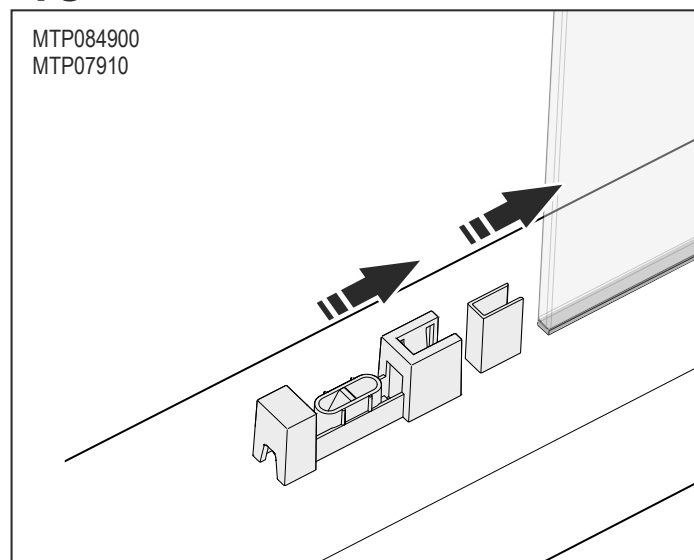

47

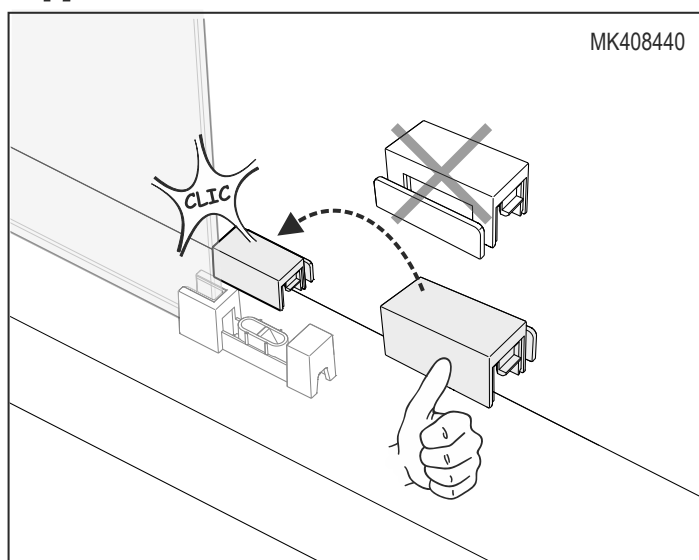


48

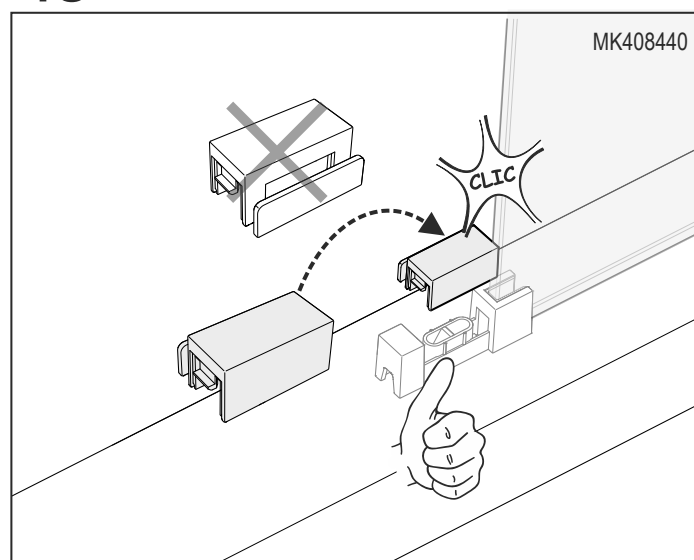





49

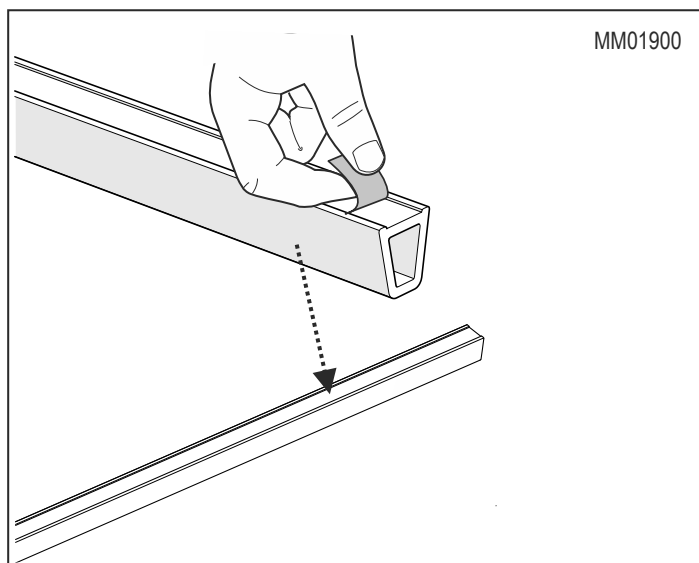


50

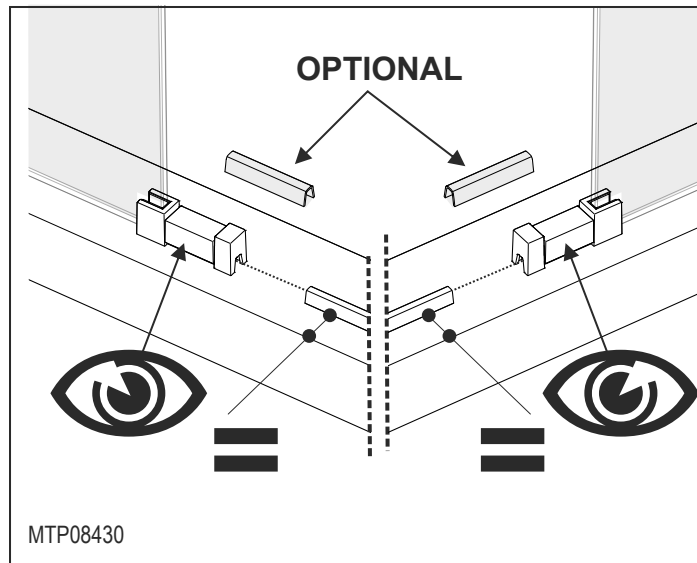


51

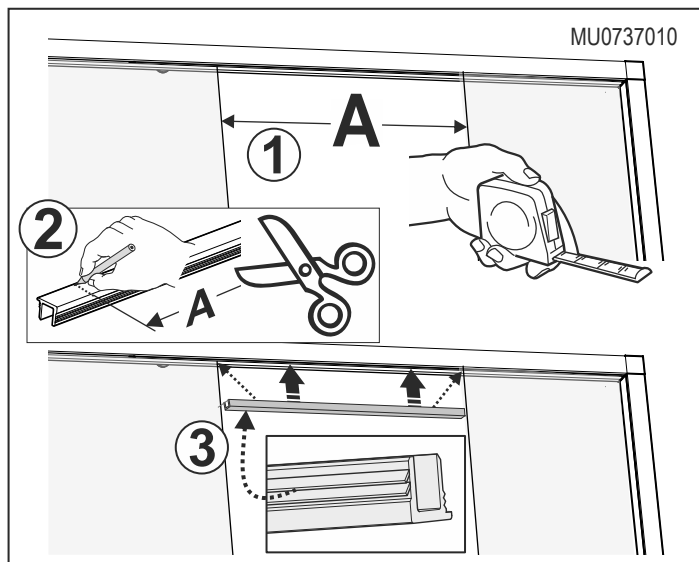


52

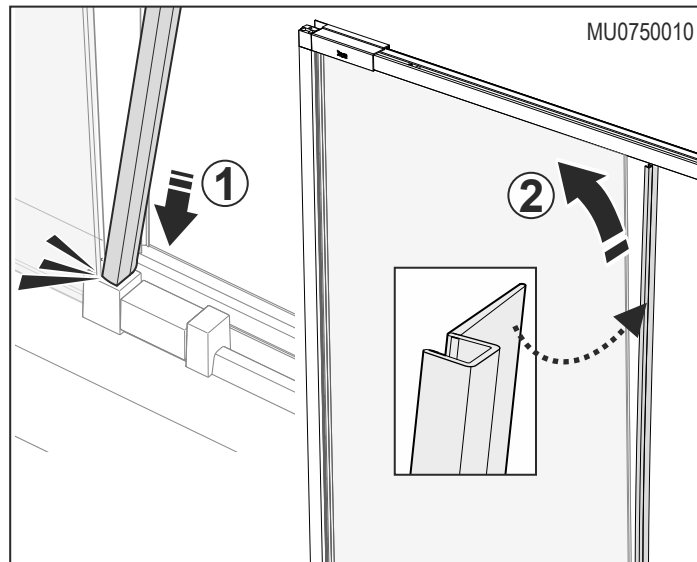

53

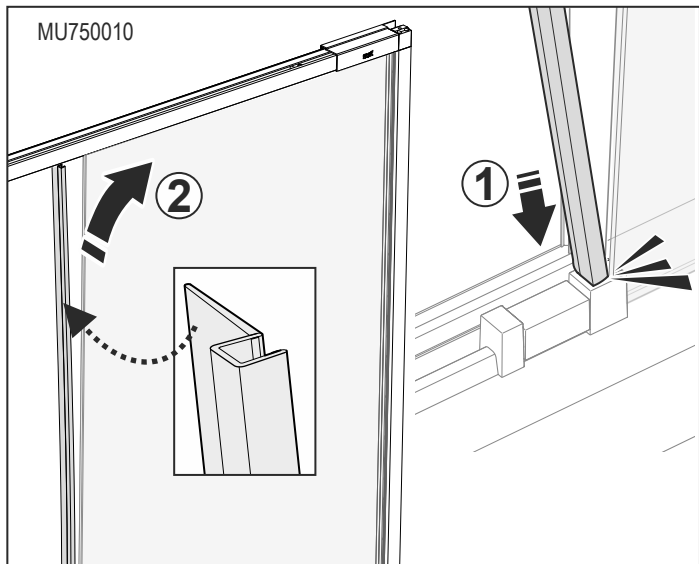


54

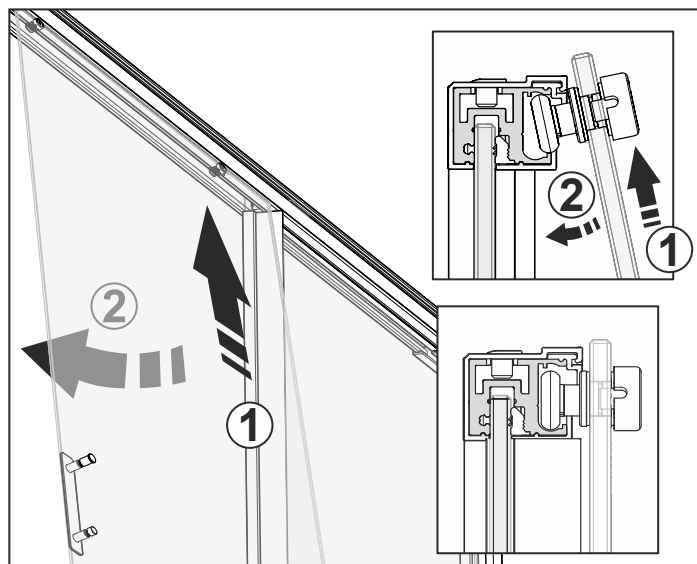




55

MU0563010
MU0750010
MU0567010

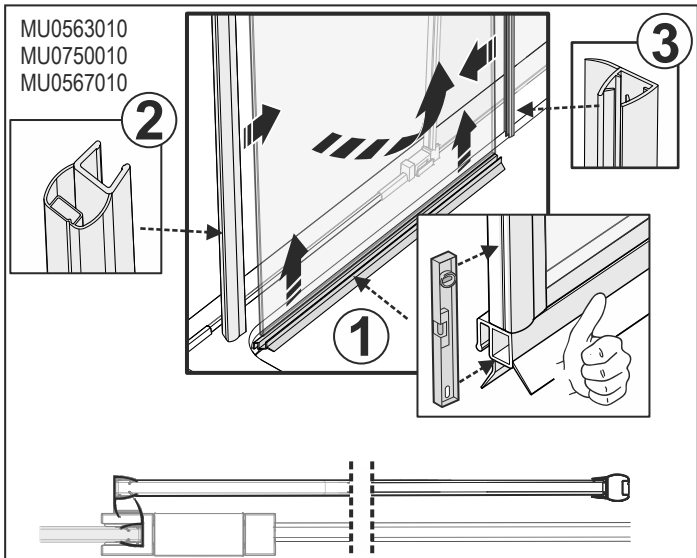


56

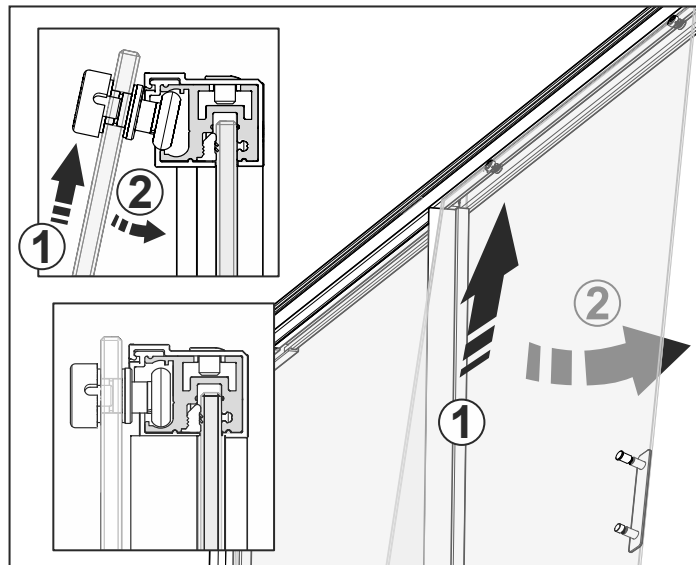


57


MU0563010
MU0750010
MU0567010

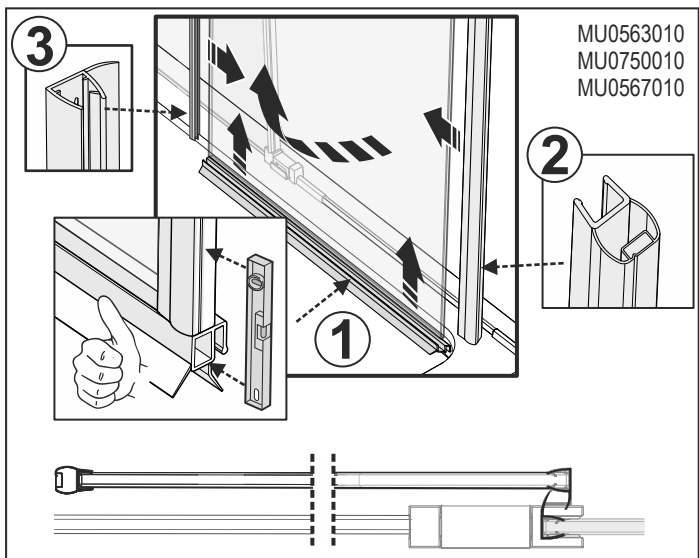


58

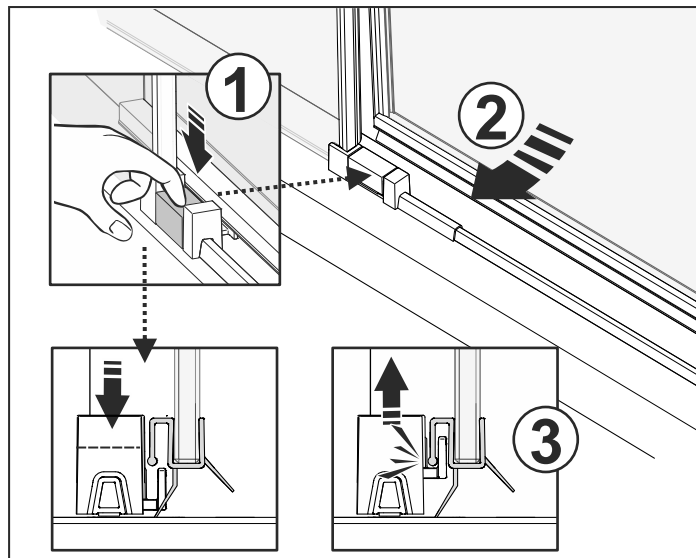

59

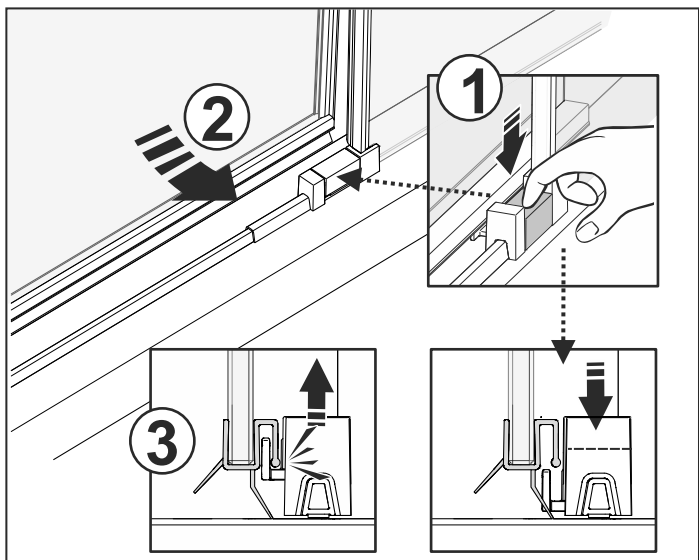

60

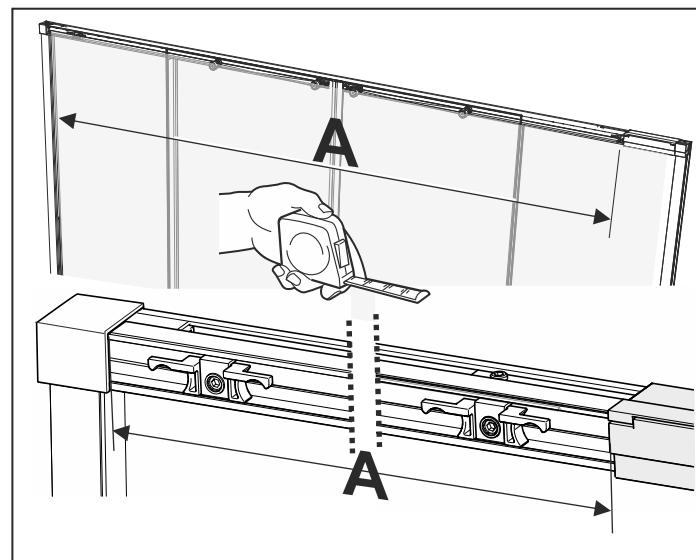



MU0724010

A-5

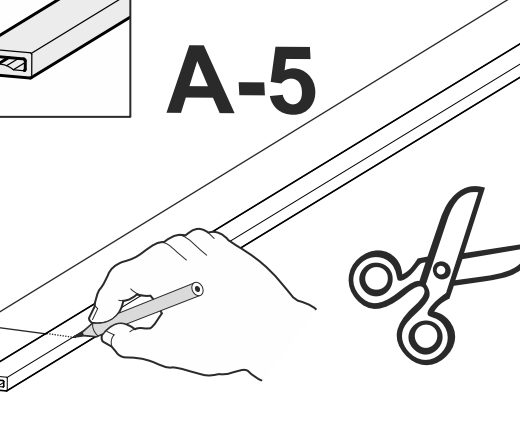


Diagram A-5 illustrates the marking and cutting of the cable tie. It shows a hand holding a pencil to mark the cable tie, with a pair of scissors positioned to cut it. An inset shows a close-up of the cable tie's end.

62

MTP088000

63

The diagram illustrates the installation of the handle in three steps:

- 1**: Insert the handle into the slot.
- 2**: Push the handle forward until it clicks.
- 3**: Turn the handle to the open position.

An inset shows the handle's length is 25 mm minimum.

64

The diagram illustrates the installation of the handle in two steps:


- Step 1:** The handle is inserted into the door profile. A dimension line indicates a minimum gap of 25 mm between the handle and the profile.
- Step 2:** The handle is turned to the open position, as indicated by the curved arrow.

65

66



67

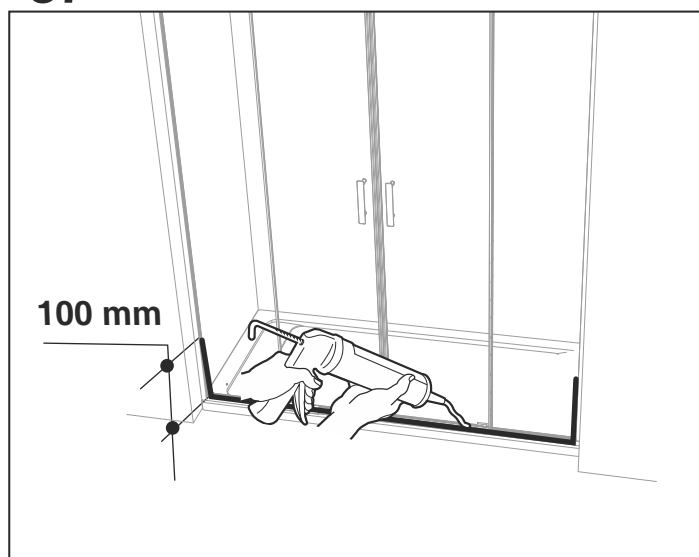

68

